




## Apps functions setting

Enter the 10-figures ID number on the back of the device. The original password is "123456", click log in, and enter App, as shown in picture below:

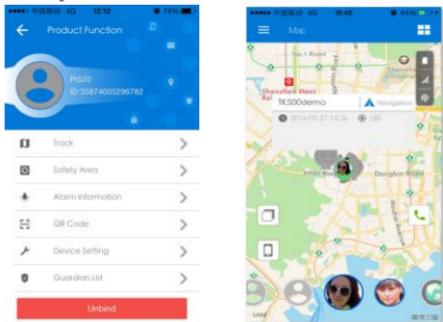

### ➤ **Real -time tracking** : Show the latest location of the device:

Click update location information to see relevant information.

### ➤ **Historical route** : Display historical route in certain period of the device.: You can choose whether to filter out LBS location data.

### ➤ **Geo-fence** : Add ,check or cancel Geo-fence area: When the device moves into or out of the Geo-fence, the location platform will send an alert to App.(Note:we suggest to set the radius of Geo-fence over 100 meters to reduce false alerts.)

### ➤ **Setting** : Set parameters of the device(make sure that the device is online,otherwise the command can not be sent to the device.)as shown in photo on the right:



1.**About the device** : Check and edit information of the device.

2. **Change password** : Change log in password of the website platform and App.

3. **Interval for uploading GPS location** : Adjust the time interval of GPS uploading location. The shorter time interval is, the more accurate the location is. Meanwhile, the standby time is shorter. We suggest every 10 minutes or every hour uploading location. If you are tracking targets, adjust to every 30sec uploading location, when target found, turn back to 10 minutes or 1 hour to keep longer standby time.

4.**Main monitoring number** : The master number can send command and receive alarm.

5.**The white list and phonebook** : Only the phone numbers on white list or phonebook can call the phone number of the device for monitoring .

6.**Sensor lights** : When the environment gets dark, LED light flashes automatically, the wearer will be easier to be found.(factory setting shut down the LED lights to save standby time)

7.**Time zone of software** : This is for APP time , users can set it according to local time zone.

8.**Device languages**: The device's alarm SMS languages includes Chinese and English so far.

9.**Remote reboot**: Power on the device via APP **Remote power-off** : Power off the device via APP.( once conduct remote power-off, users will be not able to remote power-on it. Please be cautious to use the function.)

➤ **Device message** :A list shows alert information sent by the device.

➤ **Alarm setting** : Whether receive the pushed alert

information from APP.

➤ **Log out** : Log out the APP, and never get the alarm reminders via APP.

For more details of APP and platform functions, please visit our website: <https://www.thinkrace.com>

### **SMS commands**:

All command should be written in lowercase letters, without any blank space and end with "#".

Command for setting master number :

**"pw,123456,center,number#"**

For example : **pw,123456,center,180\*\*\*\*\*#**

The tracker will reply : 180\*\*\*\*\* has been set as the master number successfully.

Special tip:The setting of other sms comands can be set only by the master number. (A form of more sms setting can be found in the end of this manual.)

### **Remark** :

◆ Please put the tracker in the place where network signal is strong.

◆ The new device needs to be charged for 2 hours before use. During use of the device, please fully charge and discharge it at least once every 3 months to avoid battery life reduction.

◆ Standby time : 1) Upload location data every 10 minutes ,the standby time is 60 hours ,talking time is 4 hours (Actual test) ;

2 ) Turn off APP and web platform function, the standby time is about 10 days. Note: Above test data is base on the status of strong GSM network.

◆ After you insert the SIM card and charge the device, please put back the rubber plug into it's hole, or it will affect

waterproof effect.

◆ This product has waterproof grade IP66, but it is still not suitable for dipping in the water or being worn while swimming.

◆ Please do not open the host yourself ,or it will affect the waterproof function and lose the warranty rights.

### **FAQ :**

**Q: My GPS tracker can make calls and send message, but the APP shows "not enable"**

A: There are several reasons as follow:

1. GPRS function hasn't been activated yet;

2. Turn off GPS tracking

3. Send "dsp#" to check the GPS tracker current GSM signal, if the GSM signal is not strong, GPRS will be affected firstly, next is the text, last is the voice communication.

In brief, the GPRS signal is weak, the situation is like the one when we can make a call but can not visit a webpage;

4. Please set APN as follows:

1) Set master number first, the SMS command is

**"pw,123456,center,your phone number#"**

2) Please try to find the apn data from the SIM card's official website and then send the SMS command as follow:

**"apn,apndata#"**

3) If the APN needs user's name and password, for example: the user's name is "cm", password is "123", then the SMS command is **"apn,apndate.cm,123,.#"**;

4) If you get a reply, then restart the device.

5) If the APP still show "not enable" please call the telecom operator to get the APN data.

P.S: APN reference website: <http://wiki.apnchanger.org/>

**Q: After white list set, voice monitoring is unavailable.**

A: If the SOS master number is group cornet number with the number of GPS device, enter group cornet number when binding

numbers, and make sure the SIM card of the device has caller ID display function.

**Q: Device shows online, but it shows "wait for the device responses" when you set command with APP.**

A: a. Device signal is not strong, result in blocked GPRS data;

b. Device is busy in talking online.

### **SMS command list:**

Command	Function
pw,123456,center,number#	Set master number
factory#	Delete all number , restore factory default
gprsgps,0#	Close gps positioning, only GSM standby
gprsgps,1#	Open gps positioning(default)
lsn,0#	Close LED Smart rolling LED light
lsn,1#	Open LED Smart rolling LED light (default)
lz,0,8#	Change the SMS language to English, the first digital is for language, 1 is Chinese, 0 is English. the second digital is for timezone.
url#	Check the location.
reboot#	Remote restart GPS host
apn,apndata,username,passwd,plmncode#	Configure the apn setting