


User manual

1、 Product Overview

VT460 are industrial class devices for telematics ,It Reads vehicle live data from ECU、 GPS data and G-sensor data, Then sends these data to server by 4G .

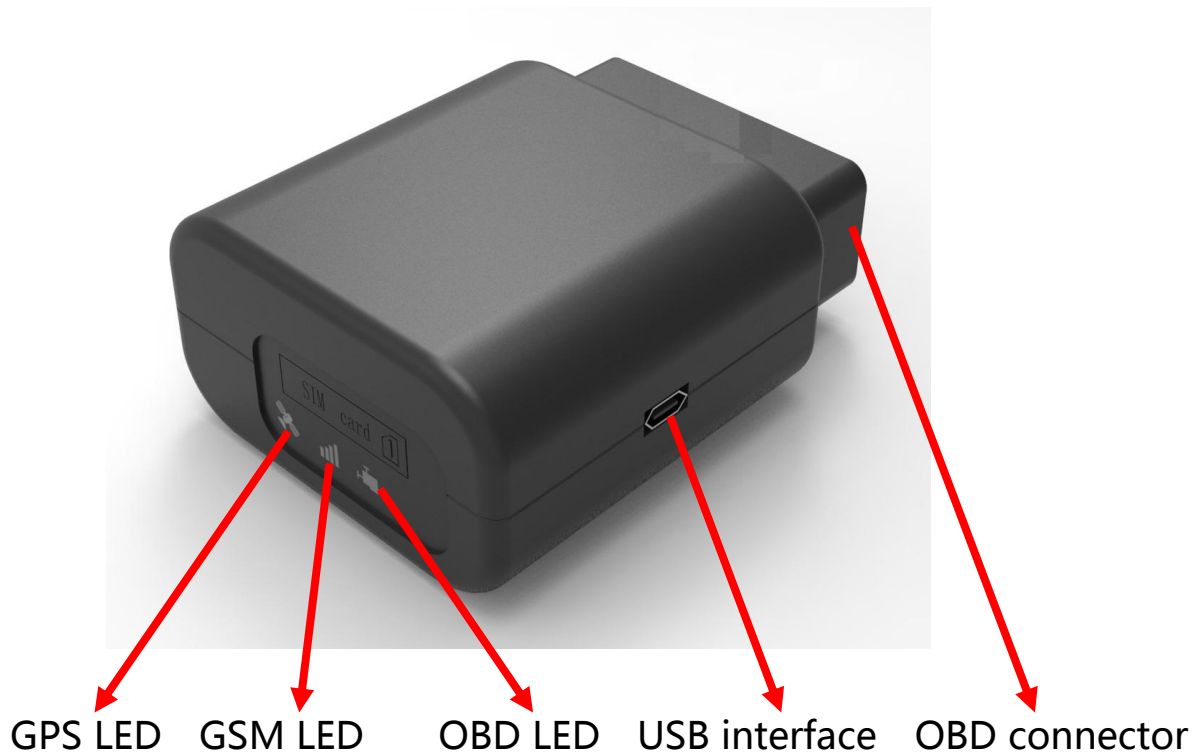

2、 Installation Instruction

➤ SIM card installation



First, remove the SIM card cover.


Then insert the Micro SIM card and press gently, a click will be heard upon successfully placing the SIM card in its place, please follow the insert direction marked on the SIM card cover.

At the end, put SIM card cover back.

➤ Device installation

First, find the OBD port at vehicle:

In general, the OBD port is located in the driver or passenger cabin, from the edge of dashboard on driver side to the border of 300mm, It is easy to touch by sitting in the driver's seat; the preferred location is within the area from steering post to the vehicle centerline

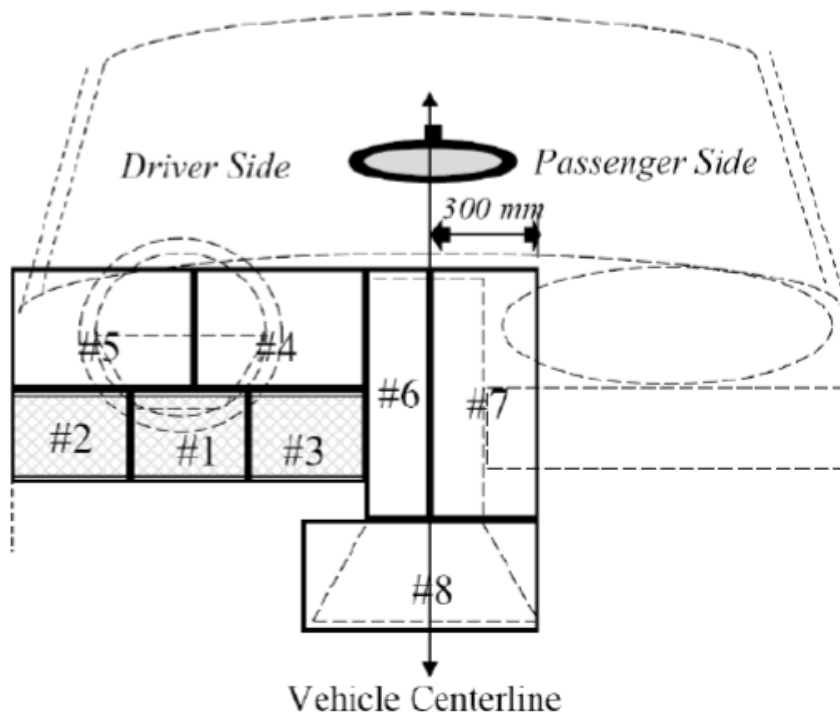

Then device installation:

Before installing the device, please make sure the device has been configured with necessary parameters including network parameters.

Park the car and make sure the engine is off, align the OBD connector of the device with the engine diagnostic port and simply push it in place, ensuring the device is secure.

If the OBD port cover cannot be closed back after the device is plugged in, please use an OBD extension cable and mount the device in a proper place. Some heavy-duty vehicles may need a 9-pin or 6-pin Deutsch wiring harness.

For vehicles that do not have an OBD port, please use a power cable to connect the vehicle battery.

Start the engine; the device starts OBD communication, which can be indicated by lights or APP log information.