

Tamperproof GPS watch

User Manual

Please read the instruction before installing and using the product.

1. Appearance of the product




2. Charging

2.1 Charging with a cable.

The watch will be charged by connecting the cable to the magnetic contact. It could take 3-4 hours to fully charge.

Please charge it when it shows low battery alert. The watch will send low battery alert to the tracking platform when the battery level is as low as 5%.

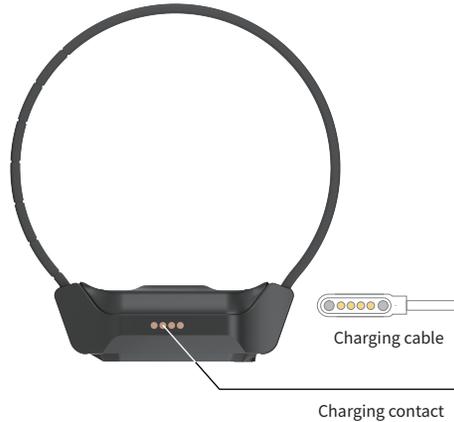

2.2 Charging with a power bank.

The watch will be charged by a portable power bank. Please refer to the user manual of the power bank for details.

3. Install the SIM Card


3.1 Open the back cover with cross screwdriver.

3.2 Install a Nano SIM.

3.3 Install the back cover and fasten the screws.

The SIM card should support 4G, and enabled with GPRS plan and balance.

The watch might be damaged by install an off-standard SIM. Please contact your supplier.

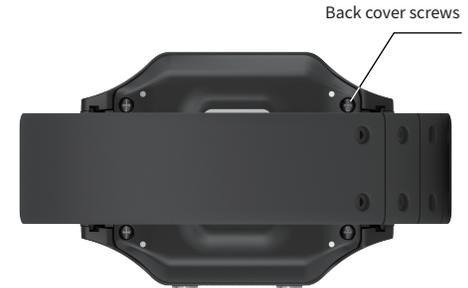

4. Power ON and Power OFF

The watch would power ON automatically with charging cable connected.

Short press the power ON button for 1 second to power ON it.

The watch can't be powered OFF by pressing button when there is SIM card installed.

With SOS enabled, the wearer could short press the SOS button for 3 seconds to trigger an SOS alert.

Long press the button for 15 seconds to restart the watch. The watch would vibrate 1 time to tell it will be restarted.

5. Wearing and Key Function

5.1 Wrap the strap around the wrist to measure the length of the strap.

5.2 Cut off the excess strap with the scissors.

5.3 Wear the watch on the wrist and fasten the two ends of straps with special screws.

5.4 Cover the both screw covers. Do not try to open the strap or damage the watch without permission. The watch will send tamper alert to the tracking platform and play alarm sound every 2 minutes.

6. Device Tracking

The watch supports GPS, Wi-Fi, LBS and Beacon for indoor and outdoor tracking.

The tracking priority is GPS>Wi-Fi>LBS

The tracking process is to search GPS for maximum 90 seconds to get and report GPS location, or report Wi-Fi or LBS location only if GPS tracking fails.

The watch supports real-time tracking. It will report location immediately after receive a GPRS command from the tracking platform.

7. SOS Alert

The watch supports switching ON/OFF SOS alert by GPRS command.

By short pressing 3 seconds, the watch will vibrate for one second and send SOS alert data with latest location to the tracking platform if the SOS alert is enabled. After sending the SOS alert, the watch will start SOS call process. It will make phone call to the first SOS number until the call is answered. If no answer or SOS button was pressed again to cancel the outgoing call, it will try to call all the other SOS numbers by turns.

8. Waterproof

The watch is splash, water, and dust resistant and were tested under controlled laboratory conditions with a rating of IP67 under IEC standard 60529. It survived 30 minutes submerged in one meter deep of clean water.

Waterproof are not permanent conditions and resistance might decrease as a result of normal wear. Liquid damage not covered under warranty.

Please avoid these to prevent liquid damage:

– Charging or press button on a wet watch.

– Swimming or bathing in warm water with the watch.

– Exposing the watch to pressurized water or high velocity water, such as when showering, surfing, jet skiing.

– Using the watch in a sauna or steam room.

– Operating the watch outside the suggested temperature ranges or in extremely humid conditions.

– Dropping the watch or subjecting it to other impacts.

– Disassembling the watch, including removing screws.

– Users should also minimise the watch exposure to soap, detergent acids or acidic food and any liquids like perfume, lotions, sunscreen and solvents.