

Senior GPS Watch



Please read this manual carefully before attempting installation.

1. Notice before use

1.1 Check

Please check the accessories:

GPS Watch 1 pc, user manual 1pc, USB cable 1 pc.

1.2 Charging

Connect GPS watch to charger with USB cable. It needs 2~3 hours to charge.

The watch can work well during charging.

1.3 SIM card

Only Micro SIM card accepted.

Note: Make sure the GSM SIM card supplies all of the functions as below:

1.3.1 Enough balance of the SIM card

1.3.2 Support 2G GPRS function

1.3.3 The caller ID display function

1.3.4 The voice call function

Please turn off device before install sim card.

2. Products views




- ① Power on/off or Switch on/off
- ② SOS button/Confirm button




Nano SIM Card


3. Watch Interface

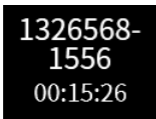


Two way communication

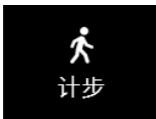

Pedometer

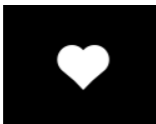

Health data

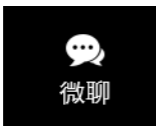


Voice chat

4. APP Using Guidance

4.1 Login APP

The guardian need to register or get the account from supplier before use the APP.

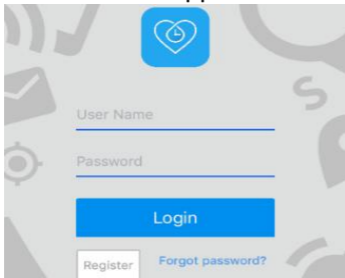

Fill the registration info and click"v"



Demo test


.....


.....

amanda.li@thinkrace.com

4.2 Add device

Adding tracker device by scanning the QR code or input the ID number/iMei number.

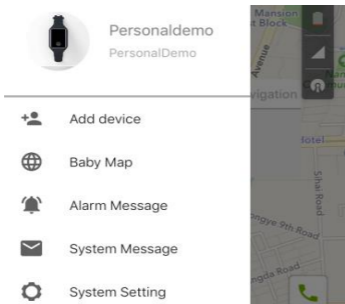

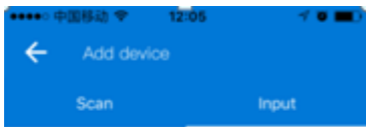

Please input the IMEI code of the device


Device IMEI Code

Next

Make sure that the card and the watch is turned, SIM is active and opened gprs business.

4.3 Live tracking



User can live track both the position of gps tracker and smart phone via the app. For indoor location, gps tracker get the position by WiFi and LBS, For outdoor position, gps tracker get position by GPS.

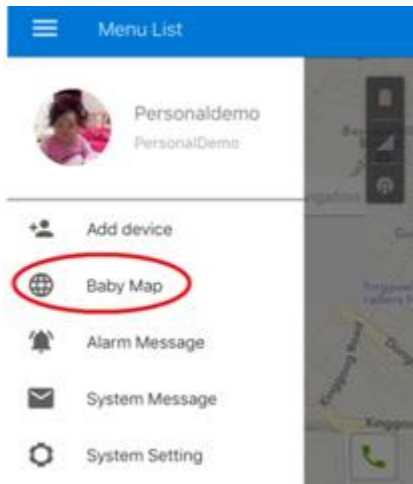

4.4 Voice talkback


User can send voice message to gps tracker by pressing "Hold down speak" on smart phone, and user can also the press "Call button" on the gps watch to record

voice message and then send it to smart phone.

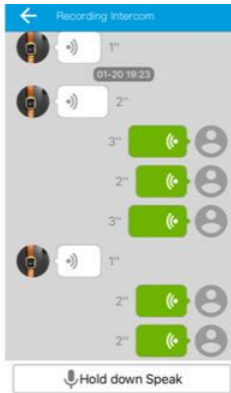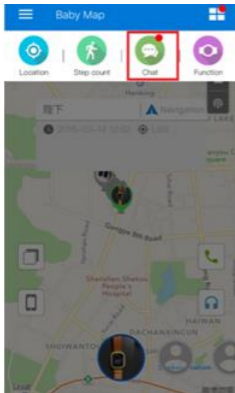

4.5 Previous track playback

Previous track could find the route map for nearly three months by choosing the beginning and ending time

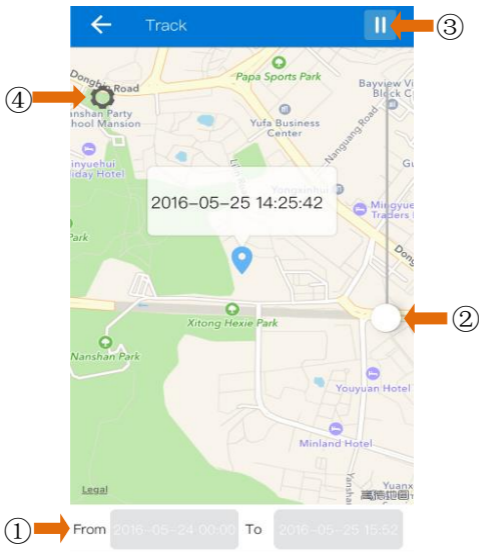

① Setting time period to query the tracking history.



② Set the map scale.

③ Pause /Play control.

④ Display settings as below.

4.6 Geo fence

Click on the upper right corner “+” under main menu for setup geofence. Then the device will lock device’s present position as center automatically, then adjust the radius distance by “+” “ - ” on map (default radius is 100 meters, recommended radius is 500 meters) .Save settings by clicking “Save”. The device will send message when the device is out of the range.

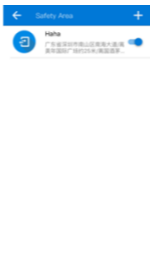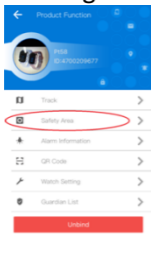

4.7 Message

All received messages of can be found in “Alarm information”, such as emergency call, offline alarm, low battery alarm, geofence alarm and etc.

4.7 Setting

Select “settings” in main front menu, then you will enter into settings of the device.

Settings includes: Working mode, Admin number, White list, Phonebook, Voice Monitoring, Language and Time zone, Remote Shutdown etc.



Watch Setting

SOS Number >

Set Admin Number 13433867833 >

Resume Factory Setting >

Turn Off Remotely >

Anti Dropping

Alarm Clock >

GPS Working Mode >

Pedometer

Setup white list numbers 1 >

Setup white list numbers 2 >

Call >

Call >

5. Trouble & Shooting

Device is not enabled on app	Please check if: 1. SIM card is not enabled 2.Support WCDMA network 3. GPRS is canceled or not enabled 4. The SIM card is in debts
Device is offline on APP	Please check if: 1. APN setting 2.Bind gps tracking platform 3. Device ID is correct
Positioning is not accurate	The device support two modes of positioning, 1.GPS positioning is mainly for outdoor positioning, the accuracy is around 10 meters. 2.GSM positioning is mainly for indoor positioning, the accuracy for LBS positioning is around 500-1000 meters.